


Í þ' ñá' Ć ž . ĥÓĀĀ ŭ ĥ' ë ŮĒ ī ī Ē ž WμØþ' Æ ī Ů Æ ŭ Ĭ ž ! ě ě' Ć þĒ ĥ Ē ě ž f ŮĒ ě Ē Æ Ē ā Ā Ů Ů ě Ā ž Запасные части -



PENTAIR JUNG PUMPEN
COMPLI 1200

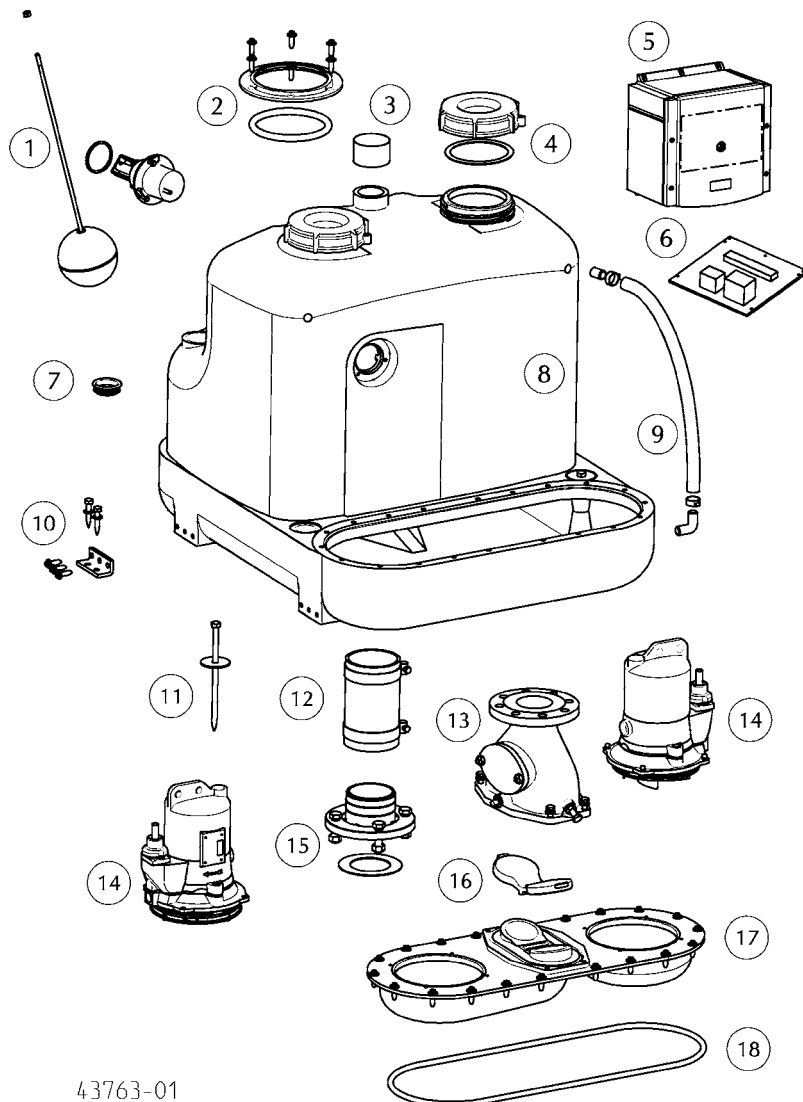

43763-01

①	Niveauerfassung	Level control	JP47306
②	Klemmflansch	Clamping flange	JP43713
③	Überschiebmuffe	Collar	JP46814
④	Wartungsdeckel	Service lid	JP42798
⑤	Steuerung	Control unit	
	1210/4, 1215/4		JP47286
	1225/4, 1225/2		JP45786
	1235/2		JP45787
⑥	Steuerungsplatine	Control board	JP47304
⑦	Steckdichtung	Plug in seal	JP45099
⑧	Behälter	Tank	JP44862
⑨	Pumpenlüftung	Pump ventilation	JP43710
⑩	Auftriebssicherung	Anti floating	JP43716
⑪	Auftriebssicherung	Anti floating	JP43709
⑫	Elast. Verbindung	Elastic connector	JP43705
⑬	Gehäuse Klappe	Housing valve	JP46813
⑭	Pumpe	Pump	
	1210/4		JP45778
	1215/4		JP45779
	1225/4		JP45780
	1225/2		JP45781
	1235/2		JP45782
⑮	Flansch	Flange	JP43706
⑯	Doppelklappe	Duplex flap	JP46812
⑰	Basisplatte	Base plate	JP43714
⑱	Dichtband	Sealing tape	JP47966



①	Leitung	Cable	JP43717
②	Stator + Gehäuse	Stator + Housing	JP47042
③	Rotorwelle	Rotor shaft	JP45791
④	Motorabdichtung	Motor seals	JP46806
⑤	Laufadschraube	Impeller screw	JP46802
⑥	Lagersatz	Bearing set	JP46724
⑦	Lagerschild	Bearing housing	JP43720
⑧	Dichtungssatz	Seal set	JP46807
⑨	Laufad	Impeller	
	10/4		JP45793
	15/4		JP45794
	25/4		JP45795
⑩	Schraubensatz	Screw set	JP47291



①	Leitung	Cable	JP43717
②	Stator + Gehäuse	Stator + Housing	
	25/2		JP44008
	35/2		JP46211
③	Rotorwelle	Rotor shaft	
	25/2		JP47038
	35/2		JP47039
④	Gleitringdichtung	Mechanical seal	JP46567
⑤	Laufschraube	Impeller screw	JP46805
⑥	Lagersatz	Bearing set	JP46214
⑦	Lagerschild	Bearing housing	JP43726
⑧	Dichtungssatz	Seal set	JP46807
⑨	Laufrad	Impeller	
	25/2		JP46715
	35/2		JP46716
⑩	Wellenabdeckung	Shaft cover	JP47043
⑪	Motorabdichtung	Motor seals	JP46806
⑫	Schraubensatz	Screw set	JP47291